
 



Nuovo AG	Operating Panel MMI EGG-JET, Series 20	
-----------------	---	--



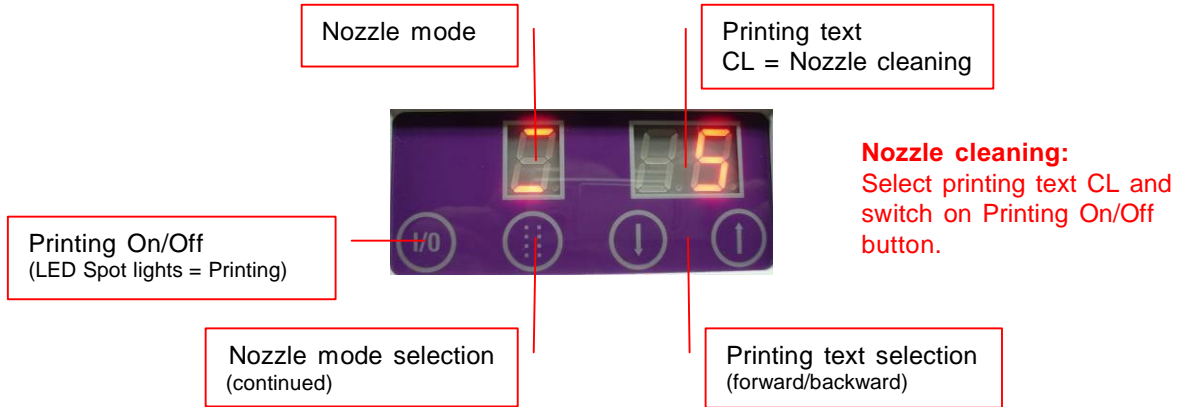


Switch on equipment with the net switch. The switch is at the side of the control box.



Nozzle modes for user

	<p>Quality: high</p> <p>Ink consumption: high</p> <p>Description: Nozzle rows 1 and 2 are at the same time active (300x300dpi).</p>	Quality 100%
	<p>Quality: medium</p> <p>Ink consumption: low</p> <p>Description: Nozzle rows 1 and 2 are at the same time active (300x150dpi). Maximum pressure quality with minimum ink consumption.</p>	Saving mode 50%

Nozzle modes for service and testing

	<p>Quality: low</p> <p>Ink consumption: low</p> <p>Description: Nozzle rows 1 active (150x300dpi).</p>	Servicemode
	<p>Quality: low</p> <p>Ink consumption: low</p> <p>Description: Nozzle rows 2 active (150x300dpi).</p>	Servicemode
	<p>Quality: low</p> <p>Ink consumption: low</p> <p>Description: Nozzle rows 1 and 2 are at the same time active (150x150dpi). Minimum ink consumption.</p>	Servicemode
	<p>Quality: low</p> <p>Ink consumption: low</p> <p>Description: Nozzle rows 1 and 2 are at the same time active (150x150dpi). Minimum ink consumption.</p>	Servicemode
	<p>Quality: -</p> <p>Ink consumption: -</p> <p>Description: No nozzle active (0x0dpi).</p>	Servicemode

Note:

When you turn the EGG-JET after the date has changed, the current date will be updated. The letters UP appear in the display. After a few seconds the EGG-JET is ready for operation. (If none of the printing texts contain a date, no date will be updated.)