 


EasyPrint10

Version 08.00

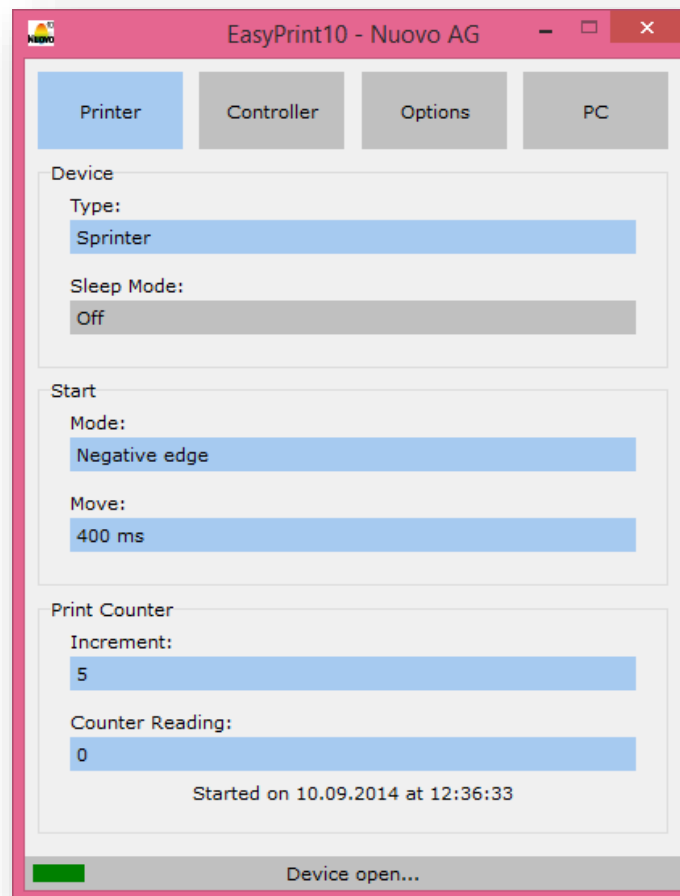

Nuovo AG

Barzloostrasse 20 • 8330 Pfäffikon ZH • Switzerland
Phone: +41 (0) 44 950 05 20 • Fax: +41 (0) 44 950 57 33
E-mail: info@nuovo.ch • URL: www.nuovo.ch

1. TABLE OF CONTENTS

1.	TABLE OF CONTENTS	2
2.	GETTING STARTED	4
2.1	SYSTEM REQUIREMENTS	5
2.2	PRINTER	5
2.3	INTERFACE CABLE	5
2.4	INSTALLING THE PROGRAM	6
2.5	UNINSTALLING THE PROGRAM	6
3.	MAIN SCREEN.....	7
4.	PRINTER	8
4.1	DEVICE.....	9
4.1.1	TYPE.....	9
4.1.2	SLEEP MODE.....	10
4.2	START	11
4.2.1	MODE.....	11
4.2.2	MOVE	12
4.3	PRINT COUNTER.....	13
4.3.1	INCREMENT	13
4.3.2	COUNTER READING	14
5.	CONTROLLER	15
5.1	DEVICE.....	15
5.1.1	TYPE.....	15
5.1.2	FIRMWARE.....	16
5.2	INPUTS/OUTPUTS.....	17
6.	OPTIONS	18
6.1	DISPLAY	19
6.2	SIGNAL LIGHT.....	20
7.	PC.....	21
7.1	EASYPRINT10	22
7.1.1	VERSION.....	22
7.1.2	LANGUAGE	23

7.2	HELP.....	24
7.2.1	USER GUIDE	24
7.2.2	TEAMVIEWER	24
7.2.3	E-MAIL	25
7.2.4	USB DRIVER.....	25
7.2.5	UPDATE.....	25
8.	CONTACT.....	26
8.1	GENERAL REPRESENTATION	26
8.2	MANUFACTURER	26

2. GETTING STARTED

EasyPrint10 is a program that makes it easy to check and adjust printer settings and perform printer diagnostics. The program runs on a PC using Microsoft Windows.

The following documentation describes how to use the EasyPrint10 program. The user guide is available in several languages. More information can be requested at Nuovo AG.



2.1 SYSTEM REQUIREMENTS

To run the EasyPrint10 program effectively, the PC should meet the following minimum system requirements:

- System: Computer with keyboard and mouse or touchscreen
- Processor: Intel Pentium 4 (1000 MHz) or equivalent
- Memory: 1 GByte of RAM
- Hard drive: 40 MByte free disk space
- Interface: USB 1.0
- Video: VGA (800 x 600, 256 colours)
- Operating System: Microsoft Windows XP (Service Pack 3)

2.2 PRINTER

The following printers are supported by the EasyPrint10 program:

- Sprinter
- Omnia
- BAN

 
2.3 INTERFACE CABLE

With the interface cable (ComboxCableUSB) the PC is connected to the printer.




2.4 INSTALLING THE PROGRAM

Start the installer and follow the instructions. The installer installs the EasyPrint10 program and the required drivers automatically.

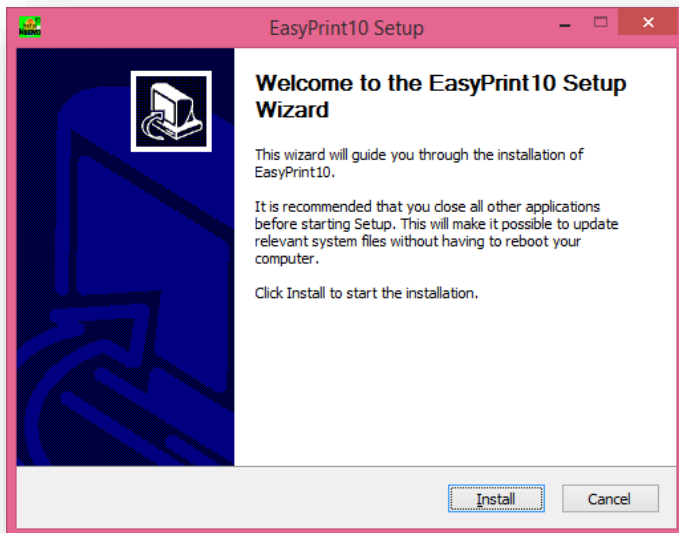


2.5 UNINSTALLING THE PROGRAM

 Use the Windows Control Panel to start the uninstaller and follow the instructions. All data will be lost.

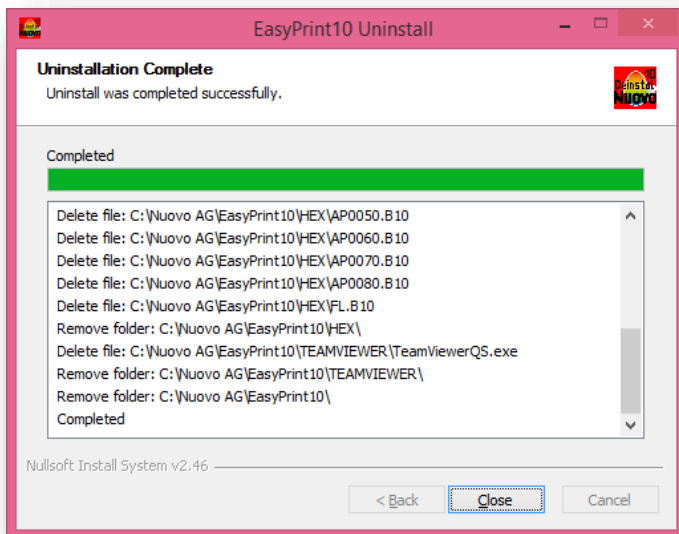

3. MAIN SCREEN

 PRINTER CONTROLLER OPTIONS PC

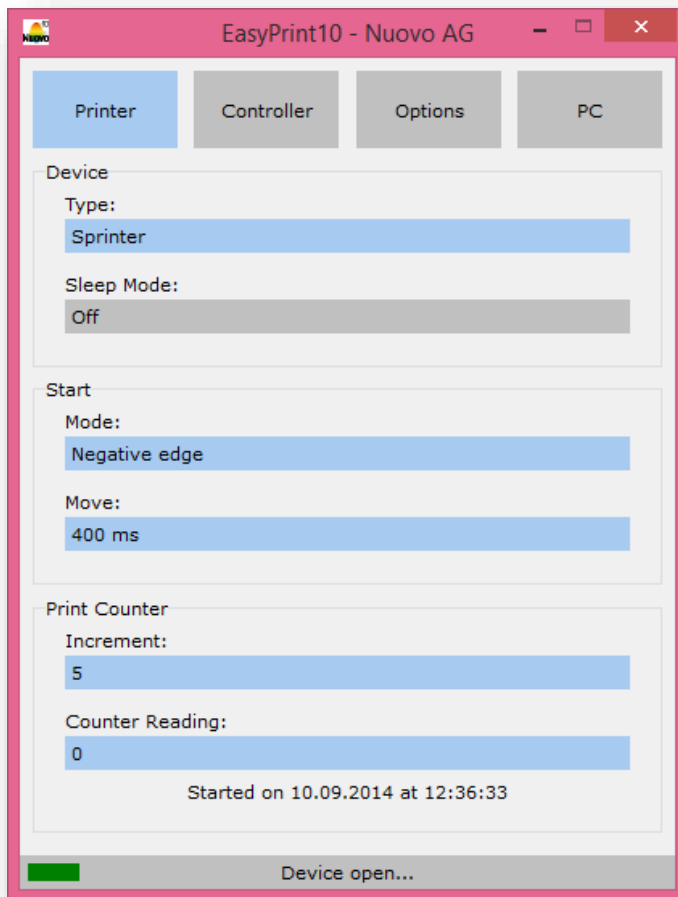

STATE

PRINTER

The functions are described in the chapter [Printer](#).

CONTROLLER

The functions are described in the chapter [Controller](#).

OPTIONS

The functions are described in the chapter [Options](#).

PC

 
The functions are described in the chapter [PC](#).

STATE

The state of the printer is displayed.

4. PRINTER



All printer settings are displayed and can be changed.

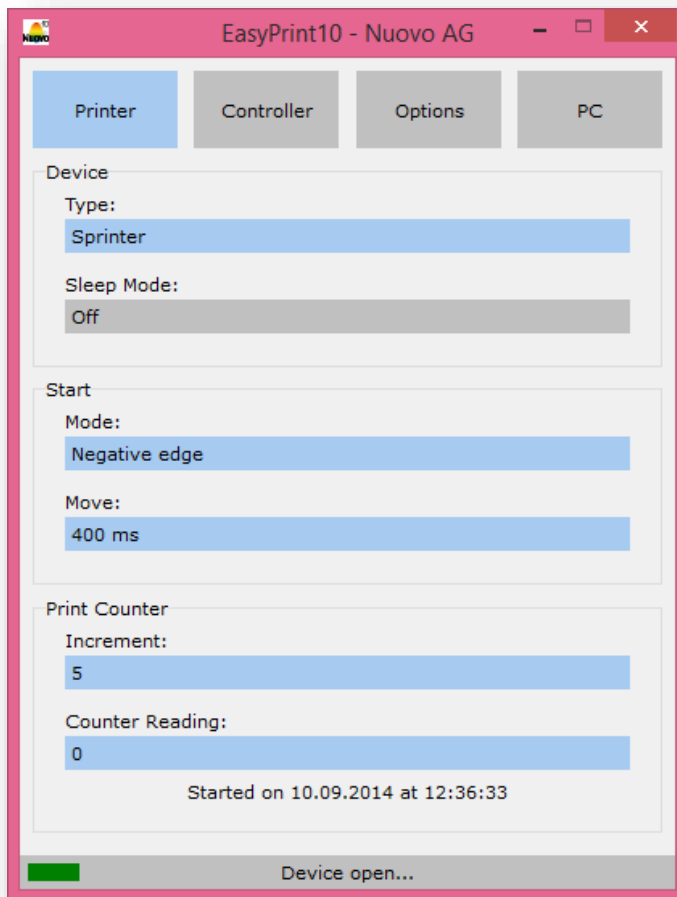

4.1 DEVICE

4.1.1 TYPE

  The selected device type is displayed and can be changed.

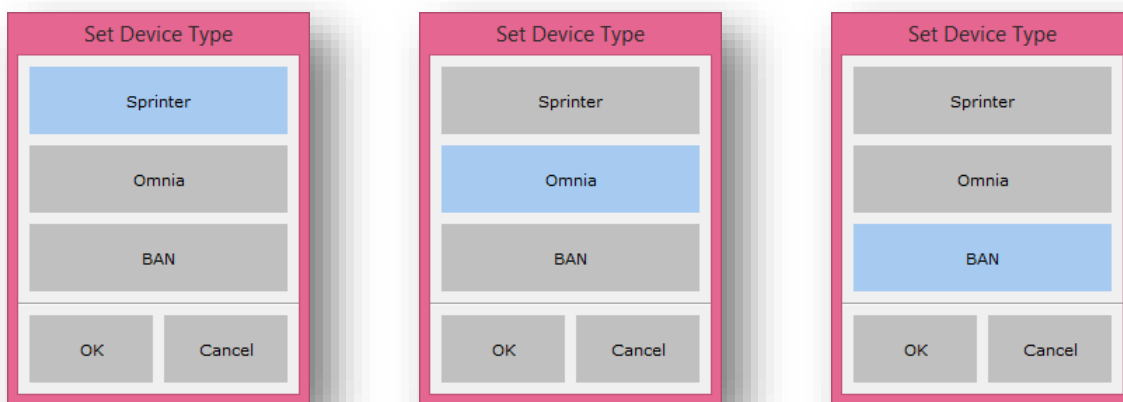

SPRINTER

Sprinter printer.

OMNIA

Omnia printer.

BAN

BAN printer.

OK

The setting is stored on the printer and the window is closed.

 
 
CANCEL

The window is closed.

4.1.2 SLEEP MODE

The time after the printer goes to sleep mode is displayed and can be changed. In sleep mode the conveyor belt is turned off. Only BAN printers support this function.

Sleep Mode:
30 seconds

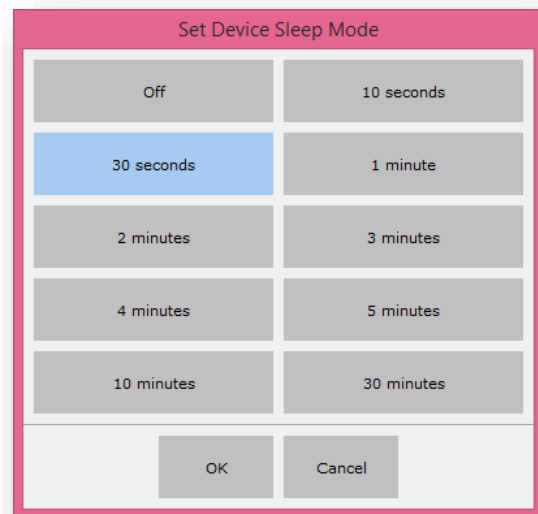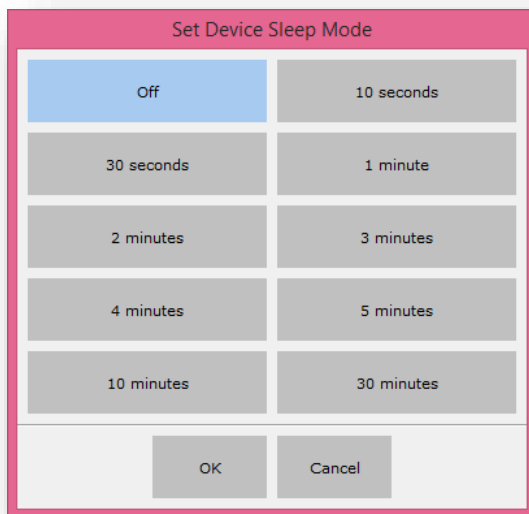

OFF

The sleep mode is not used.

10 SECONDS...30 MINUTES

If not printed for the selected time the printer goes to sleep mode.

OK

The setting is stored on the printer and the window is closed.

 
 
CANCEL

The window is closed.

4.2 START

4.2.1 MODE

The start signal change that triggers the print start is displayed and can be changed.

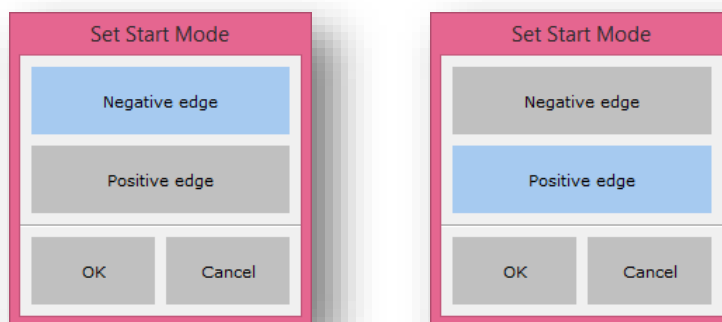

NEGATIVE EDGE

A start signal change from 1 to 0 triggers the print start.

POSITIVE EDGE

A start signal change from 0 to 1 triggers the print start.

OK

The setting is stored on the printer and the window is closed.

 
CANCEL

The window is closed.

4.2.2 MOVE

This shows how much the start signal is shifted by the printer controller. It also can be changed. No need for any mechanical displacement of printer components anymore. Only Sprinter- and Omnia printers support this function.

Move:
400 ms

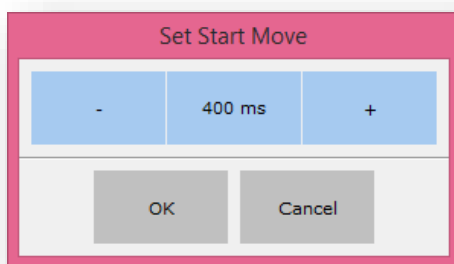

MINUS -

Reduces how much the start signal is shifted.

PLUS +

Increases how much the start signal is shifted.

OK

The setting is stored on the printer and the window is closed.

 
CANCEL

The window is closed.


4.3 PRINT COUNTER

4.3.1 INCREMENT

The number of print heads the printer is equipped with is displayed and can be changed.



Increment:
5

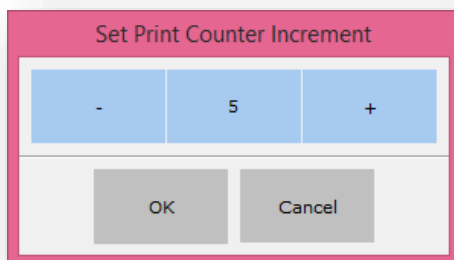 

Set Print Counter Increment

-	5	+
OK		Cancel

MINUS -

Reduces the number of print heads.

PLUS +

Increases the number of print heads.

OK

 
 
The setting is stored on the printer and the window is closed.

CANCEL

The window is closed.

4.3.2 COUNTER READING

The counter reading is displayed and can be reset.

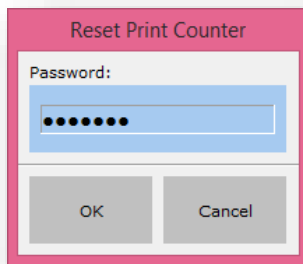

PASSWORD

Entering the password.

OK

 
Reset the print counter and the window is closed.

CANCEL

The window is closed.

5. CONTROLLER


This shows information for service and commissioning.

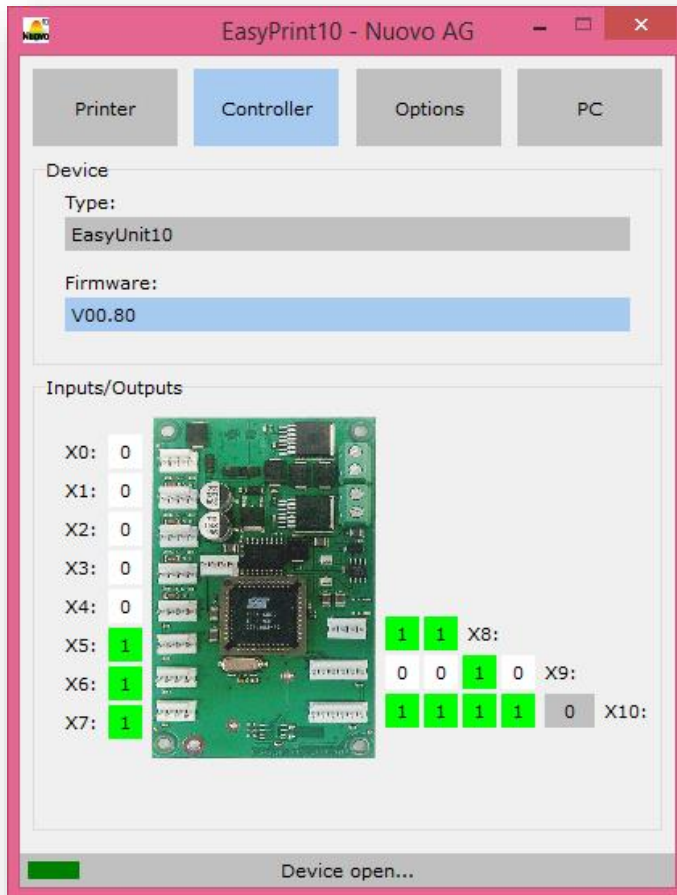

5.1 DEVICE



5.1.1 TYPE

 This shows the type of printer controller.



5.1.2 FIRMWARE

  This shows the firmware version installed on the printer controller. Also another firmware can be installed on the printer controller.

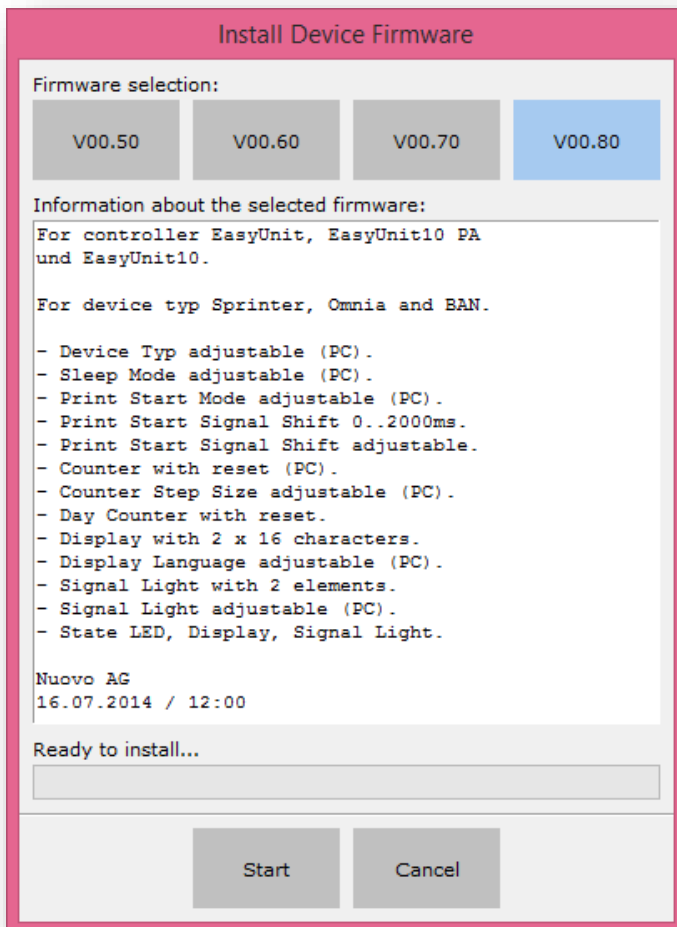

START

 
The installation of the selected firmware is started.

CANCEL

The window is closed.



6. OPTIONS

All settings of the printer options are displayed and can be changed.

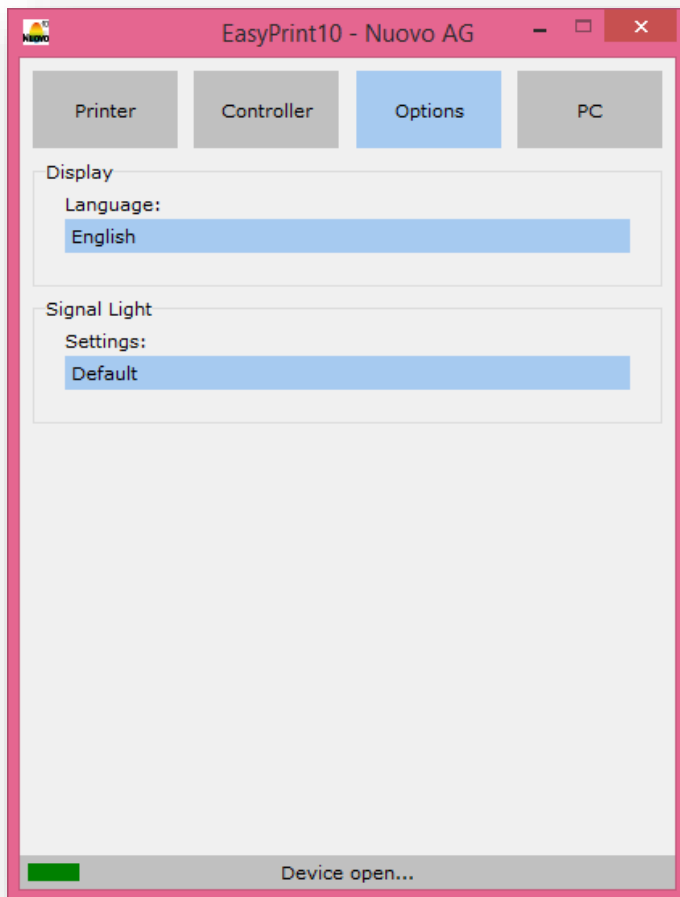

6.1 DISPLAY

  The selected display language is displayed and can be changed.

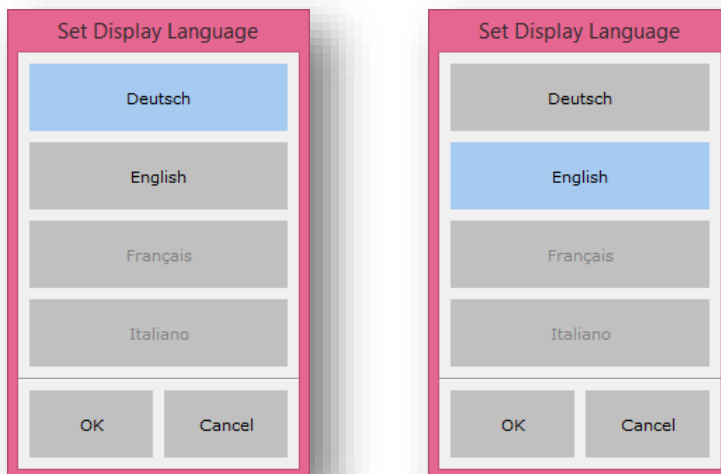

DEUTSCH

Display language German.

ENGLISH

Display language English.

FRANÇAIS

Display language French.

ITALIANO

Display language Italian.

OK

 
 
The setting is stored on the printer and the window is closed.

CANCEL

The window is closed.

6.2 SIGNAL LIGHT

The signal light setting is displayed and can be changed. Only Sprinter and Omnia printers support this function.

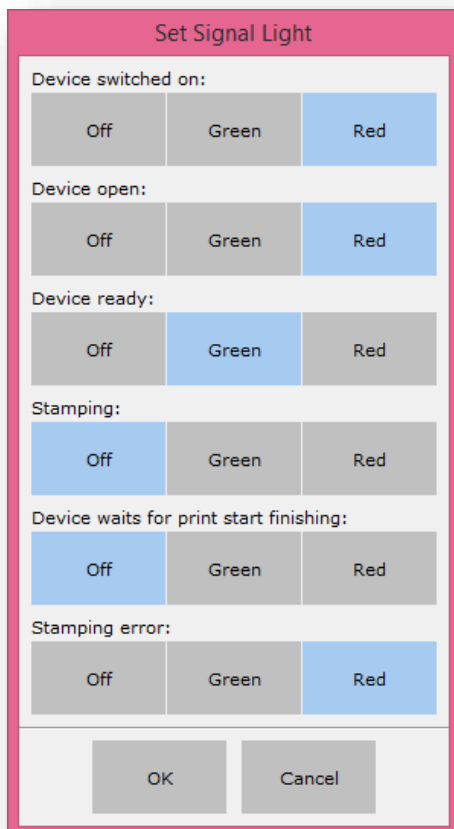

OK

 
The setting is stored on the printer and the window is closed.

CANCEL

The window is closed.

7. PC


All settings of the EasyPrint10 program are displayed and can be changed. Also various assistance are available.

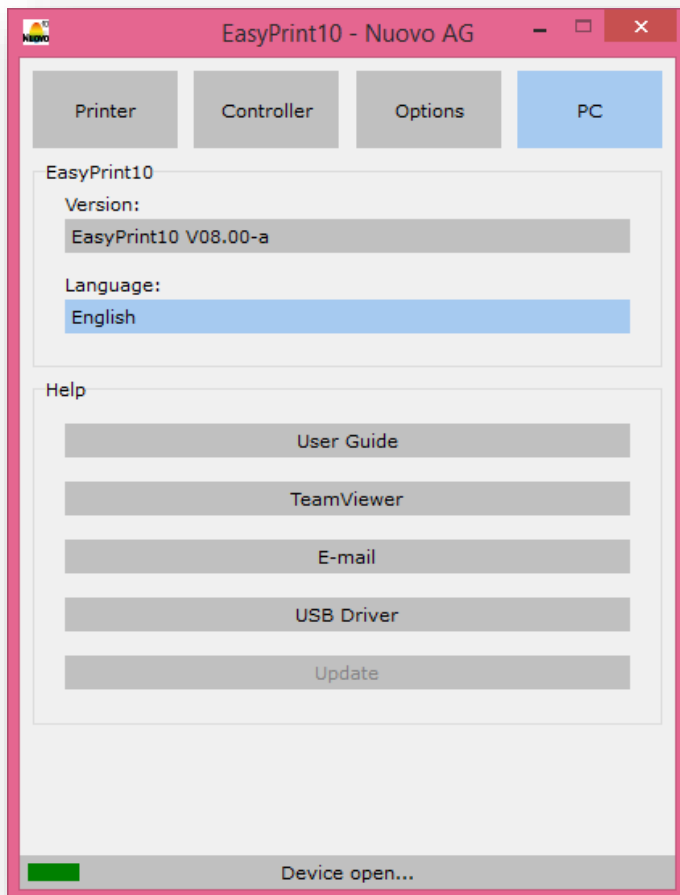


7.1 EASYPRINT10

7.1.1 VERSION

 Additional information about the EasyPrint10 program and contact information of Nuovo AG are displayed.



Version:
EasyPrint10 V08.00-a

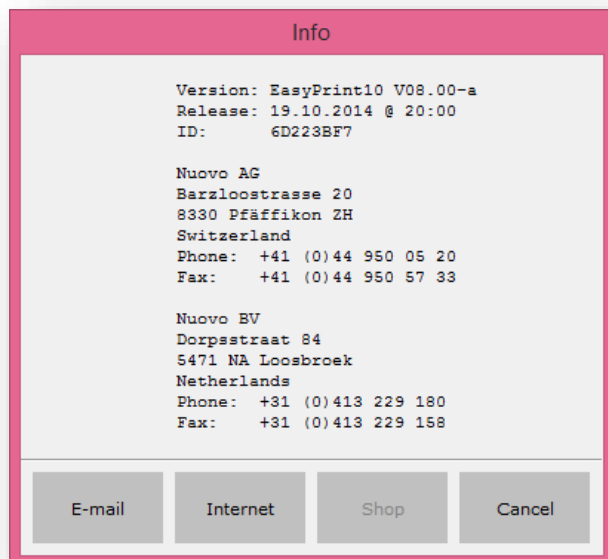 

E-MAIL

Send an e-mail to Nuovo AG.

INTERNET

Open the website of Nuovo AG.

SHOP

 
 
Order consumables and others at Nuovo AG.

CANCEL

The window is closed.

7.1.2 LANGUAGE

The selected user language is displayed and can be changed.

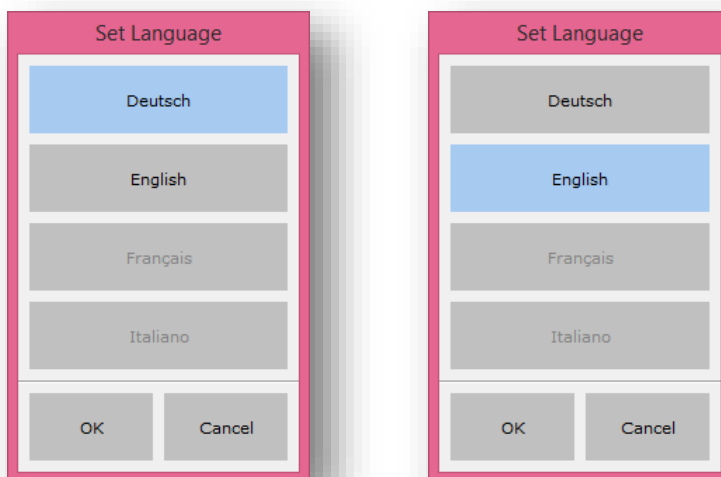

DEUTSCH

User language German.

ENGLISH

User language English.

FRANÇAIS

User language French.

ITALIANO

User language Italian.

OK

The setting is applied and the window is closed.

 
CANCEL

The window is closed.

7.2 HELP


7.2.1 USER GUIDE

The user guide is opened in the EasyPrint10 program user language. For this purpose, a PDF reader (e.g. Adobe Reader) must be installed on the PC. If the user guide is needed in another language, the EasyPrint10 program user language must be changed.



7.2.2 TEAMVIEWER

 The TeamViewer program opens. This program allows Nuovo employees to operate the PC by remote control. The PC has to be connected to the Internet and the Nuovo employees has to know the ID and the Password.




7.2.3 E-MAIL

Send an e-mail to Nuovo AG. The PC has to be connected to the Internet.

A rectangular button with a light gray background and a thin border, containing the text "E-mail" in a dark gray font.

7.2.4 USB DRIVER

 Install the driver for the ComboxCableUSB.

A rectangular button with a light gray background and a thin border, containing the text "USB Driver" in a dark gray font.

7.2.5 UPDATE

Start the installation of an existing update.

A rectangular button with a light gray background and a thin border, containing the text "Update" in a dark gray font.

8. CONTACT

8.1 GENERAL REPRESENTATION

Nuovo BV
Dorpsstraat 84
5471 NA Loosbroek
The Netherlands

Phone: 0031 (0) 413 229 180
Fax: 0031 (0) 413 229 158
E-mail: berry.vd.wijst@nuovo.ch
maurik.wouters@nuovo.ch
URL: www.nuovo.net



8.2 MANUFACTURER

Nuovo AG
Barzloostrasse 20
8330 Pfäffikon ZH
Switzerland

Phone: 0041 (0)44 950 05 20
Fax: 0041 (0)44 950 57 33
E-mail: info@nuovo.ch
URL: www.nuovo.ch

